



J-82 EXPLODED VIEW

# INCINOMITE J-82 BURNER

<b>INCINOMITE J-82/83DS GAS BURNER PARTS</b>	
<b>Part #</b>	<b>DESCRIPTION</b>
1460-00	P/J-82 6462-00 BURNER PROGRAMMER HONEYWELL S87D
2202-00	P/J-82 GAS PRESSURE REGULATOR, MAXITROL RV52 3/4" (Not shown)
2200-00	BURNER PRESSURE GAUGE 0-10" WC (Not shown)
4100-03	P/J-82 8400-00 PILOT PRESSURE REGULATOR
4100-05	P/J-82 8423-05 BURNER TOGGLE SWITCH
4100-06	P/J-82 8425-00 THERMAL SWITCH
4100-08	P/J-82 6464-00 BLOWER MOTOR (FASCO) 1600 RPM 60HZ
4100-12	P/J-82 6407-30 BURNER MOUNTING GASKET
4100-13	P/J-82 6416-90 INLET RING / SCREEN
4100-14	P/J-82 6410-00 BLOWER WHEEL
4100-16	P/J-82 6412-96 PILOT ASSEMBLY, NATURAL GAS
4100-18	P/J-82 6412-97 PILOT ASSEMBLY, PROPANE
4101-01	P/J-82 6460-00 IGNITOR ASSEMBLY, (W/TWO ELECTRODES)
4101-02	P/J-82 8419-31 GAS VALVE, 24V BASITROL H91LG12
4101-03	P/J-82 6413-09 GROUND BARRIER KIT
4101-04	P/J-82 6457-00 ELECTRODE WITH INSULATOR
4101-05	P/J-82 6448-20 TRANSFORMER, 24V
4101-06	P/J-82 6460-50 WIRE & BOOTS (BOTH)
4101-07	P/J-82 8406-58 PROVING RELAY, 24V
4110-02	P/J-82 6417-52 NOZZLE INSERT
4110-03	P/J-82 6406-05 BLAST TUBE
4110-04	P/J-82 6403-00 NOZZLE SUPPORT "T"
4121-08	BURNER BLOWER HOUSING
4121-31	P/J-82 6401-90 AIR SHUTTER ASSY.
4120-99	BURNER MOUNTING FLANGE